



GAS HEATING AND ELECTRIC COOLING PACKAGED ROOFTOP UNIT

PARTS REPLACEMENT INFORMATION GUIDE

COMPRESSOR GROUP

Compressor
Crankcase Heater

OUTDOOR FAN GROUP

Outdoor Motor
Outdoor Fan Blade
Outdoor Fan Grill

ELECTRICAL GROUP

Control box
Compressor Plug/Harness
Limit switch(es)
Circuit board
Capacitor
Transformer
Wiring harness
Compressor Contactor
Indoor Motor Contactor
Outdoor Motor Contactor
Over-temperature switch
Low Voltage Terminal Board
IGC Board
Fuse
Circuit Breaker

FILTER GROUP

Filters
Filter Track

CASING

Top Cover
Control Box Cover (inner)
Blower Access Panel
Compressor Access Panel
Filter Access Panel

GAS CONTROL GROUP

Manifold
Burner
Orifice
Flame sensor
Igniter
Gas valve

HEAT EXCHANGER GROUP

Heat Exchanger Assembly

BLOWER GROUP

Blower assembly
Blower housing
Blower motor
Blower wheel
Capacitor (where used)
Capacitor strap (where used)
Harness Assembly
Motor pulley
Blower Pulley
Belt

INDUCER GROUP

Hall effect sensor
Inducer motor
Inducer housing
Inducer motor capacitor
Inducer wheel

COIL AND PIPING GROUP

Indoor Coil
Outdoor Coil
Indoor Coil Liquid Header

To obtain information on parts please consult your installing dealer.

Have available Model No. and Serial No. located on the unit rating plate to ensure correct replacement part.

Example of Model Number

<u>MODEL</u>	<u>TONNAGE</u>	<u>VOLTAGE</u>	<u>HEAT SIZE</u>	<u>INDOOR FAN</u>	<u>OUTDOOR AIR</u>	<u>OPTIONS</u>	<u>COIL</u>	<u>PACKAGING</u>	<u>REVISION</u>
RGS	048.....	L	E	A	A	0A	A	A	A
RGH	048.....	L	E	A	A	0A	A	A	A

WARNING: Improper installation, adjustment, alteration, service, or maintenance can cause personal injury, property damage, or death. Consult a qualified installer, service agency, or your local gas supplier for information or assistance. The qualified installer or service agency must use only factory-authorized replacement parts, kits, or accessories when modifying this product.