

INSTALLATION INSTRUCTIONS

90+ Upper Door Replacement

This kit is designed to replace the upper door on the N9MP1, N9MP2, *9MPD, *9MPT and *9MPV series furnace.
* Denotes Brand

Read the entire instructions completely before starting the installation.

Examine kit to determine that the following parts are present with the replacement upper door:

Parts List		
Description	Part#	Qty
Model: Entry Level, C, H		
Door Screw *	1014488	2
Diagnostic Labels		
Single Stage	1012899	1
2-Stage	1013348	1
Operating Instruction	1013494	1
Seal Strip	1013144	3
Instructions	441 06 1046 00	1
Model: Tempstar		
Door Screw *	1014488	2
Diagnostic Labels		
Single Stage	1012899	1
2-Stage	1013348	1
Operating Instruction	1013494	1
Seal Strip	1013144	3
Instructions	441 06 1046 00	1
Faceplate		
1013489 or 1013490 or 1013491		1
Trim Strip	1013487	2


If any part is missing, immediately contact your parts supplier.

* Denotes parts available through Fast Parts.
Others are available only through Upper Door Kits.

Installation

Model: N9MP1 (See **Figure 1**)


1. Place Diagnostic Label part 1012899 at the right bottom corner on the inside of the door.
2. Insert the two (2) screws into the screw holes located at the front bottom of the door to install the door on the furnace.

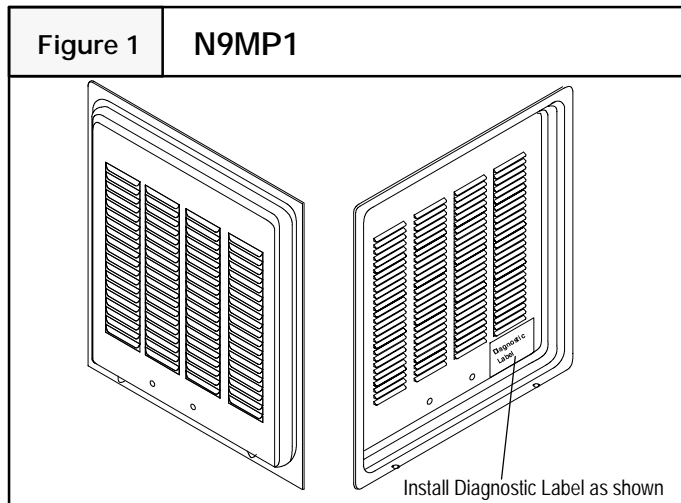

Model: N9MP2, *9MPD, *9MPT, *9MPV (See **Figure 2**)

* Denotes Brand

1. Place one Diagnostic Label below the sight glass on the inside of the door.
NOTE: Part 1012899 for N9MP2, *9MPD
Part 1013348 for *9MPT, *9MPV
2. Place Operating Instruction Label part 1013494 below the diagnostic label on the inside of the door.
3. Place seal strips (2) along the side edge on the inside of the door and trim to length.
4. Place another seal strip along the bottom edge on the inside of the door and trim to length.
5. (Tempstar only) Insert Face Plate on the designated holes on the front of the door.
6. (Tempstar only) Place Trim Strips (2) along the front side edge of the door.
7. Insert the two (2) screws into the screw holes located at the front bottom of the door to install the door on the furnace.

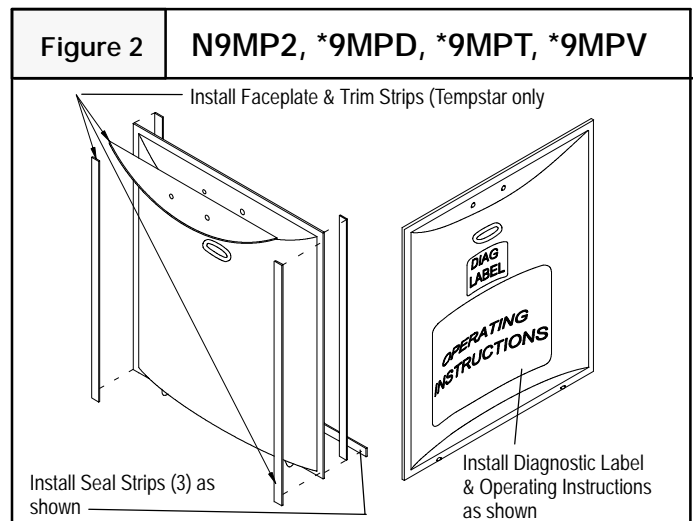

CAUTION

CUTS AND ABRASION HAZARD.

Failure to follow this caution could results in bodily injury.

Sheet metal parts may have sharp edges or burrs. Use care and wear appropriate protective clothing and gloves when handling parts.

NOTE: If replacing front door with machine thread thumbscrews, drill new door screw holes from 1/8" diameter to 1/4" diameter before inserting thumbscrews. Use machine thread thumbscrews from original (old) door. Discard black door screws included with this kit.

If door screws from original door are not available, use 10-32 UNF thread screws available at local hardware stores.